



STARLITE® Installation Methodology


HANDLING AND STORAGE

- Store undercover and in dry conditions.
- Handle with care, especially on the edges and corners, which can be damaged if subject to sharp impact.
- Do not apply excessive pressure, for example by standing or sitting on the product, as permanent damage may be caused.
- **NB:** STARLITE should not be installed in applications where the facing material is exposed to direct or indirect Ultraviolet radiation.

TOOLS


- Sharp Knife
- G-clamps
- Galvanised hoop irons
- Pop-rivets
- Drill
- Heavy-duty staple gun
- 100mm wire staples

1.

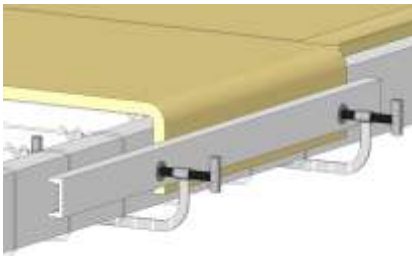


- Install straining wires at 300m centres.
- Using the G-clamp affix STARLITE roll at the apex.
- Unroll the blanket taking out any slack.

2.

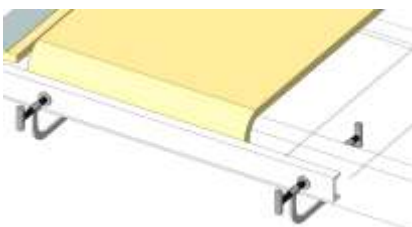

- Using the G-clamp affix STARLITE roll at the bottom purlin.

3.

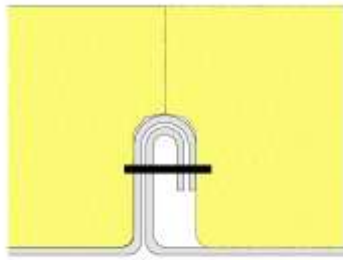

- To join the blankets fold-up the overlapping foil edges.
- Staple together.
- Fold the foil over and staple again.

4.



- Fix the roof sheeting to the purlins through the STARLITE



TEL: (012) 800 3606

www.roofinsulation.co.za

